


Core Manual Reference: IN610303AV

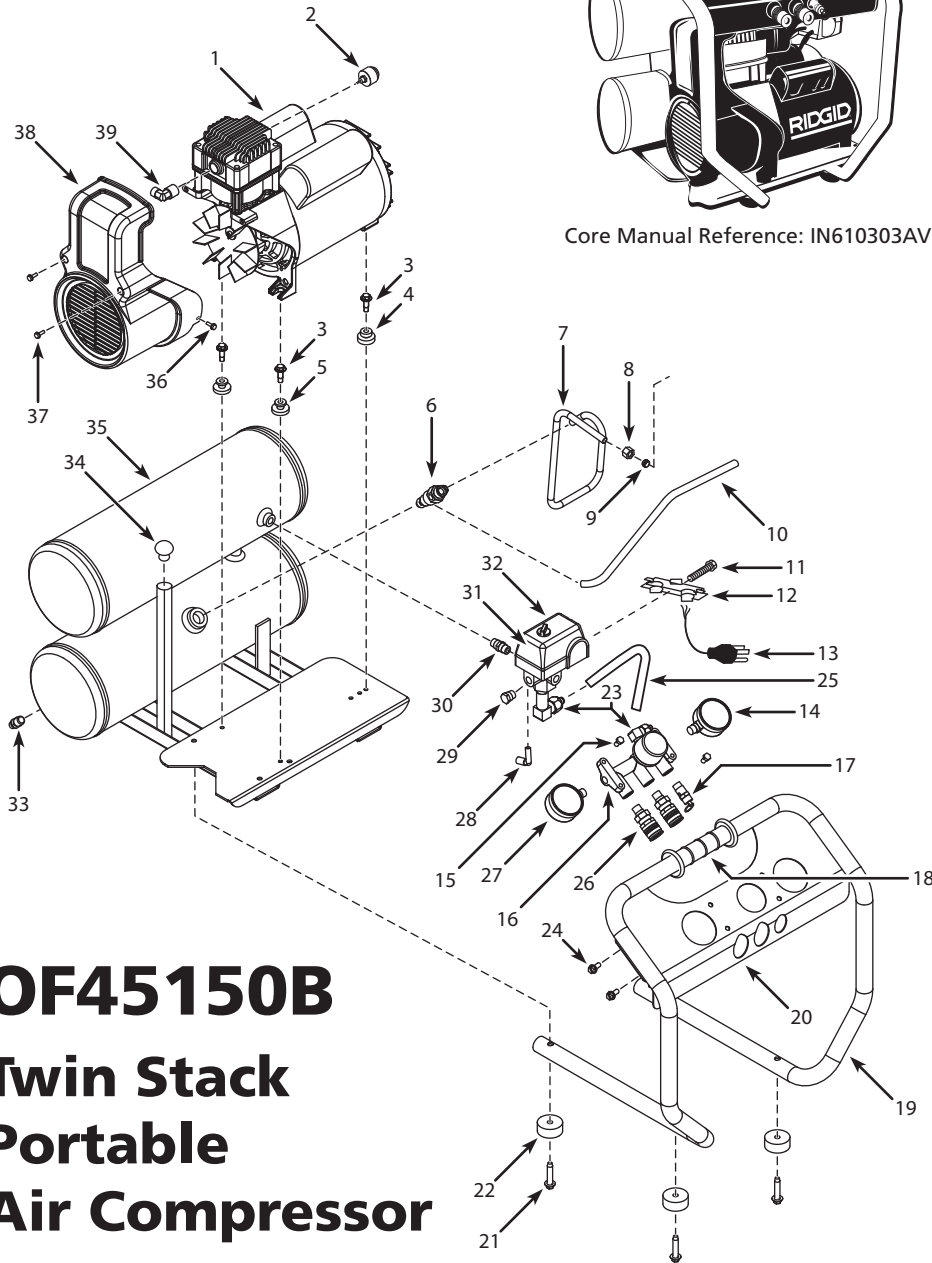

OF45150B Twin Stack Portable Air Compressor

REPAIR PARTS - WHOLE UNIT

For Repair Parts,
Call 1-800-4-RIDGID

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

Ref. No.	Part Number	Descriptions	Qty
1	WL373001AV	* Pump/motor assembly	1
2	ST085700AV	Filter	1
3	ST158000AV	Shoulder bolt	3
4	WL003202AV	Rubber bushing (Rear)	1
5	WL003203AV	Rubber bushing (Front)	2
6	CV223800AV	* Check valve	1
7	▲	Exhaust tube (includes nuts and ferrules)	1
8	▲	Nut	1
9	▲	Ferrule	1
10	ST188800AV	Unloader tube (includes tube insert, nut & ferrule)	1
11	ST209800AV	Strain relief screw	1
12	CW209600AV	Strain relief	1
13	EC012600AV	Cord	1
14	GA016709AV	* Tank gauge	1
15	○	1/4 inch - 20 x 1/2 inch Screw	4
16	WL024501AV	* Regulator assy. (includes 14, 26 & 27)	1
17	V-215106AV	165 psi Safety valve	1
18	ST185600AV	* Grip	1
19	WL025900AV	Roll bar	1
20	WL025800AV	Control panel bracket	1
21	ST073276AV	Foot screw	4
22	ST158300AV	Molded rubber bumper	4
23	●	Elbow compression fitting (includes nut & ferrule)	2
24	ST074415AV	1/4 inch - 20 x 1/2 inch Thread cutting screw	4
25	●	Control Panel tube	1
26	HF203300AV	* Coupler	2
27	GA016705AV	* Outlet gauge	1
28	CW210001AV	* Unloader Valve	1
29	ST022500AV	Plug	1
30	HF002401AV	Nipple	1
31	CW217800AV	* Pressure switch cover	1
32	CW211300AV	* Pressure switch	1
33	D-1403	* Tank drain valve	1
34	ST073612AV	Plug	1
35	AR052700OE	4.5 gal. twin tank	1
36	ST129301AV	Shroud screw	1
37	ST129302AV	Shroud screw	2
38	WL012406AV	Shroud	1
39	ST188900AV	Exhaust fitting	1

Repair Parts Kits

▲	WL029600AV	Exhaust tube kit (w/o check valve)
●	ST170400AV	Control panel tube kit (includes inserts, nuts, & ferrules)

* Considered wear items


○ = Standard Hardware Item

REPAIR PARTS - PUMP

For Repair Parts,
Call 1-800-4-RIDGID

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

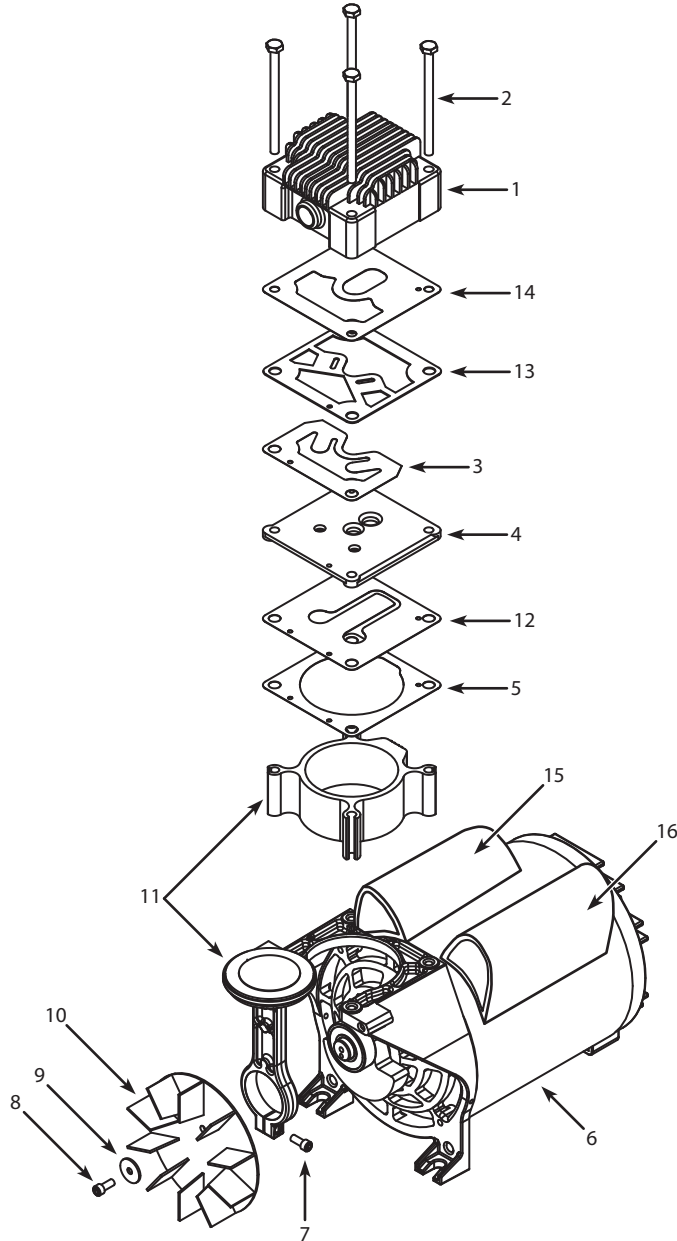

Ref. No.	Part Number	Descriptions	Qty
1	WL010500AV	Head	1
2	●	Head bolts	4
3	▲	* Exhaust valve	1
4	▲	Valve plate	1
5	▲, XA012100AV	* Cylinder gasket	1
6	N/A	* Motor assembly (includes eccentric/bearing assembly)	1
7	(Included with piston assembly, Ref. No. 11)	M5 x .8 x 20 HH cap screw	1
8	■	M5 x .8 x 12 HHCS (L.H.)	1
9	■	Washer	1
10	■	Fan	1
11	WL210300SJ	Piston/cylinder assembly (includes #7)	1
12	▲	* Intake valve	1
13	▲, XA010800AV	* Head gasket (metal gasket)	1
14	▲, XA012500AV	* Discharge valve gasket	1
15	MC507017AV	Start capacitor (280-520 μF/250 VAC)	1
16	MC506908AV	Capacitor (40 μF/450 VAC)	1

Repair Parts Kits

●	WL602801AJ	Head bolt kit (set of 4)
▲	WL201405SJ	Valve plate kit (Includes #3-5, 12-14)
■	WL209802SJ	Fan kit (includes #8-10)

* Considered wear items

N/A = Not Available