

Control Panel Assembly Instructions


Instruction Sheet

Parts List

Ref. No.	Description	VS5025	VT6335	Qty.
1	1/4" x 3/4" Screw	*	*	4
2	1/4" Lock nut	*	*	6
3	Control panel assembly	VS021000AJ	VT036000AJ	1
4	3/8" Nylon tube	WL021400AV	WL021400AV	1
5	3/8" Push-in fittings	ST119704AV	ST119704AV	2
6	Hose rack	WL024000AV	WL024000AV	1
7	Plastic plug	ST073615AV	ST073615AV	1
8	1/4" x 1 1/4" Screw	*	*	2

* Standard Hardware Item

Tools Needed

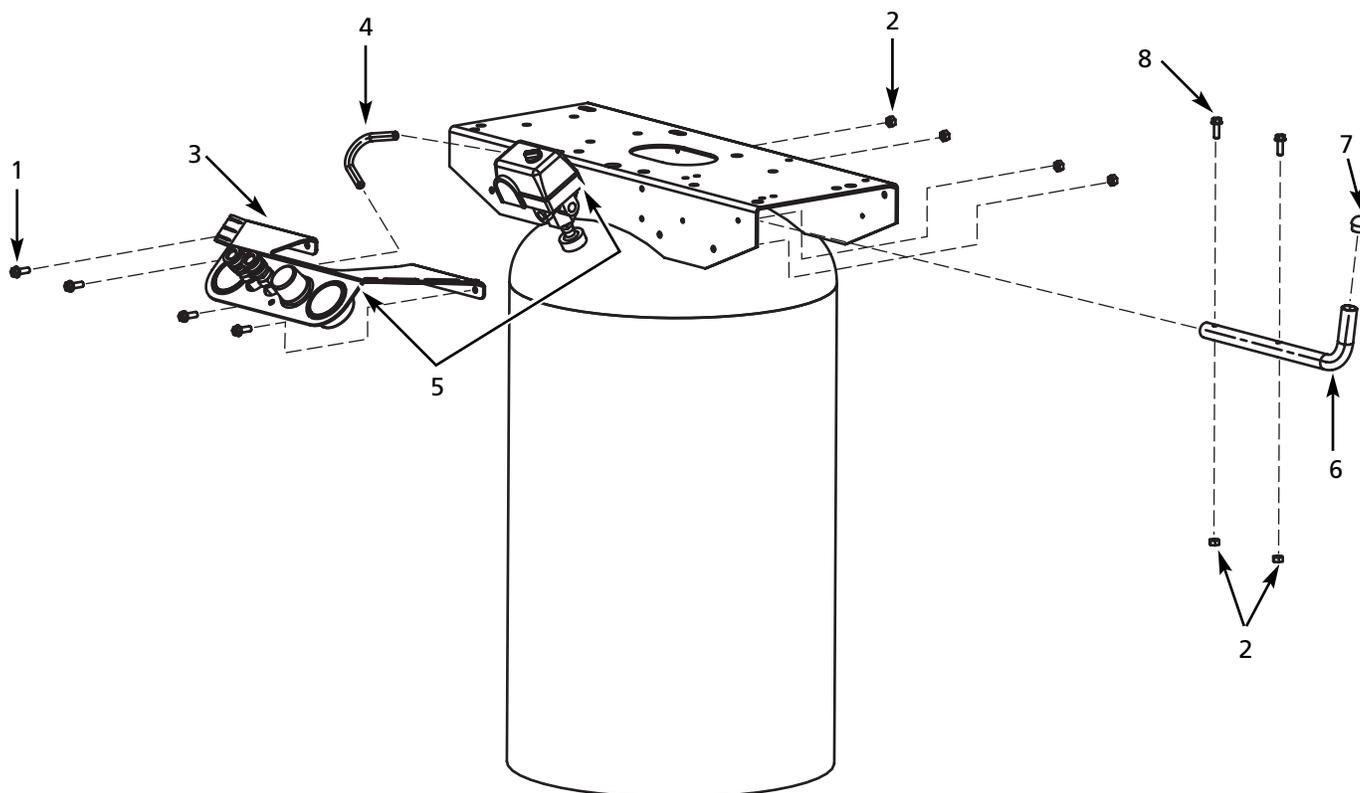

Assembly Instructions - Some models may be preassembled

1. Assemble control panel to compressor tank as shown in the diagram. Fasten with 1/4" screws and nuts.
2. Push 3/8" nylon tube into brass fittings on pressure switch and control panel. Push firmly until the tube is fully seated.
3. Tighten nuts with wrench.
4. Assemble hose rack as shown in the diagram and tighten the nuts with a wrench.